


# IQ4 LOCK-PH Pharmaceutical Vertical Fall - Metal Detection Designed for the Pharmaceutical & Nutraceutical Industries

### **Product Highlights**

- Designed for inspecting granular and powder products
- Enhanced product throughput of 3000kg an hour
- Best in class calibrated detection levels of 0.3mmFE, 0.35mmNFE, 0.5mm St/St
- Full IQ, OQ, PQ validation documents and certification
- Design and construction compliant with 21 CFR, parts 210 and 211 and certified to NEMA 4X / IP66
- The unit includes, standard failsafes, reject confirmation audible alarm and air failure

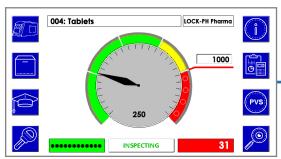

# 7" Touchscreen with a new easy to use interface

The new 7" touchscreen ensures simple and efficent user acces and simple operation.



#### **External USB Port for Data Reports**

Each unit is supplied with an external USB port to download data for secure storage and distribution in pdf or other formats. Wired or wireless ethernet and SCADA capability are available.




#### **Auto Learn Provides Simple and Fast Set-up**


The IQ4 LOCK-PH will automatically set-up and store 200 different pre-sets, calibrating for product effect and loose material as the product passes through the system.




## **Technical Specification**

| Material of<br>Construction | 304 Polished Stainless Steel with 316 mirror polished Stainless Steel reject |
|-----------------------------|--|
| Single Frequency            | 1MHZ   |
| Supply Voltages             | 110 - 250V AC 50/60Hz  |
| Power Consumption           | 20VA   |
| Temperature Range           | -10°C TO 40°C (14°F to 104°F)  |
| Humidity                    | 0 to 95% Relative Humidity (Non-condensing)                                  |
| Environment                 | IP66   |
| PVS Enabled                 | Yes (Sample Test)  |
| Ethernet Capability         | Yes  |
| USB Capability              | Yes  |

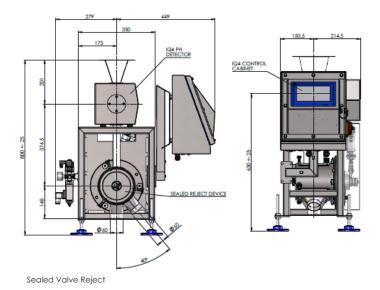

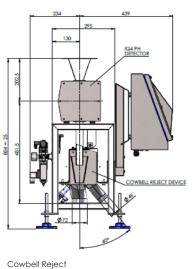

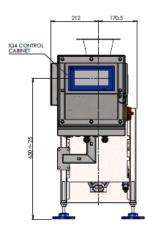

#### **Automatic Reject Options**

There are two different reject systems available to ensure contaminants are safely and reliably rejected from the production line. The Sealed Valve Reject is completely dust-tight thus eliminating any cross contamination. The Cowbell-type diverter style reject will reject contaminated product into a separate reject bin.



Sealed Valve Reject



Cowbell Diverter Reject





